

VEHICLE ACCESSORIES CONTENTS



VEHICLE ACCESSORIES CONTENTS

CAMPER TIE DOWNS	164-168
TORKLIFT TURNBUCKLES	169
AIR HELPER SPRINGS	170-171
AIR ACCESSORY SYSTEMS	172
RIDE-RITE SERVICE PARTS	173
SUSPENSION/STABLELOAD	174
TOWING MIRRORS	175
MIRRORS	176-177
LUVERNE MUD FLAPS	178
BED MATS	179
TRUCK STEPS	180-181
RV SECURITY	182
CAMPER ACCESSORIES	183
ATWOOD AIR CONDITIONERS	184
BOLT LOCKS	185
MISC. TRUCK ACCESSORIES	186
LANDSCAPE TRAILER ACCESSORIES	187

STEP

1

Choose your Front Tie Downs:

Does the truck have running boards that extend past the cab and onto the bed?

No

Yes

	YEAR	MODEL (CAB TYPE)	BED LENGTH	MFG#	MFG#
FORD	00-11	Ranger (All Cabs)	6'	F2013	-
	81-97	F150 (Square Body)	ALL	F4000 (3,4,5,6,H4)	F4000 (3,4,5,H4)
	81-97	F250 HD (Square Body)	6.5'	F4000 (3,4,5,6,H4)	F4000 (3,4,5,H4)
	81-97	F250 HD (Square Body)	8'	F2000 (3,H4)	F4000 (3,4,5,H4)
	81-97	F350 HD (Square Body)	ALL	F2000 (3,H4)	F4000 (3,4,5,H4)
	97-03	F150 / F250 LD (All Cabs)(Round Body)	8'	F2001	F4001 (4,5)
	97-03	F150 / F250 LD (All Cabs)(Round Body)	6.5'	F2002 (3,H4)	F4002 (3,4,5,H4)
	98-03	F150 (Super Crew Only)	5.5'	F2009	-
	99-07	F250 / F350 (ALL Cabs)	8'	F2011	F4006 (4,5)
	99-07	F250 / 350 (ALL Cabs)	6.75'	F2007	F4007 (4,5)
	04-08	F150 (ALL Cabs)	8'	F2003	-
	04-05	F150 (All Cabs/No Stepside Bed)	6.5'	F2004	-
	04-05	F150 (Super Crew Only)	5.5'	F2005	-
	06-07	F150 (Super Crew Only)	5.5'	F2010	-
	06-14	F150 (All Cabs, No Bed Stepside)	6.5'	F2014	-
	08-10	F250 / F350 / F450 (All Cabs)	8'	F2011	F4006 (4,5)
	08-15	F250 / F350 (All Cabs)	6.75'	F2012	-
	2008	F150 (Super Crew Only)	5.5'	F2017	-
	05-15	F450 / F550 Cab & Chassis (34" Frame Only)	N/A	F2008 (22)	-
	09-14	F150 (All Cabs)	8'	F2015	-
	09-14	F150 (Super Crew Only)	5.5'	F2017	-
	11-15	F250 / F350 / F450 (ALL Cabs)	8'	F2016	-
	2015	F150 (Crew Max)	6.5'	F2018	F2018
CHEVROLET	07-12	CANYON/COLORADO (ExtendedCabs)	6'	C2216	-
	88-98	1500 / 2500 (All Cabs)	6.5'	C4201 (2,3,4,5,6,H4)	C4201 (2,3,4,5,H4)
	88-98	1500 / 2500/3500 (All Cabs)	8'	C2201 (3,H4)	C4201 (3,4,5,H4)
	95-00	3500 (All Cabs)	8'	C2201 (3)	C4201 (3,4,5,H4)
	99-07	1500 / 2500 Classic LD 5.5" Frame (All Cabs)	6.5' and 8'	C2202 (3,7,10,H2)	C4203 (3,4,5,H4)
	01-10	1500 / 2500 / 3500 Classic & New Body HD 8" Frame (All Cabs)	8'	C2204 (10)	C4203 (3,4,5,H4)
	01-10	1500 / 2500 / 3500 Classic & New Body HD 8" Frame (All Cabs)	6.5'	C2205 (10)	C4203 (2,3,4,5,H4)
	04-13	1500 Classic & New Body (Crew Cab Only)	5.5'	C2211	-
	07-13	1500 New Body (Standard Cab Only)	6.5'	C2208	-
	07-14	1500 New Body (Standard Cab Only)	8'	C2212	-
	07-13	1500 New Body (Extended Cab Only)	ALL	C2207	-
	11-14	2500 / 3500 HD (Crew / Ext. Cab Only)	6.5'	C2220	-
	11-15	2500 / 3500 HD (Crew / Ext./Double Cab Only)	8'	C2219	C4204 (4,5)
	11-15	2500 / 3500 (Regular Cab Only)	8'	C2215	-
	2014	1500 (Crew Cab)	5.5'	C2218	-
	14-15	1500 (All Cab)	6.5'	C2217	-
	14-15	1500 (Regular)	8'	C2212	-
	2015	2500 / 3500 HD (Crew / Double Cab Only)	6.5'	C2220	-
NISSAN	00-04	Frontier 4wd (Crew Cab 4 Door Only)	4.5'	N2407	-
	00-04	Frontier (King/Crew Only)	6'	N2408	-
	05-12	Frontier (King/Crew Only)	6'	N2409	-
	13-15	Frontier (King Only)	6'	N2409	-
	14-15	Frontier 4wd (Crew Cab 4 Door Only)	5'	-	-
	2008	Titan (King Cab 2 Door Only)	8'	N2405	-
	08-12	Titan (Crew Cab 4 Door Only)	7'	N2406	-
	04-14	Titan (King Cab 2 Door Only)	6.5'	N2402 (16)	-
	04-14	Titan (Crew Cab 4 Door Only)	5.5'	N2401	-

Footnotes

- SuperHitch Magnum 20K/30K requires the use of Tie Down R3504 or Talon Tie Down R3504A
- Drilling may be required into the Spring Hanger Bracket which is welded to the frame
- Drilling may be required for installation
- May require modifications to the running board / bed access steps brackets to install Tie Downs
- Additional labor required for installation of Tie Downs
- Front Tie down is available in adjustable Tie Down style only
- Fits Classic Body Style only
- Will also work on vehicles without a hitch receiver
- The Toyota HD Tow package attaches to the side and bottom of the vehicles frame. The Standard Toyota Tow package attaches to the bottom of the vehicles frame only
- To determine the correct fit: 1500 & 2500 model / Classic body style vehicle owners must measure the vehicle frame height at the back of the truck next to the spare tire. If the frame is 5.5" tall it requires the LD application, If the frame is 8" tall it requires the HD application
- Will work with aftermarket hitches that do not have side plates that attach to the bottom of the frame
- Tie down requires 4"x4" footprint on the side plate of the aftermarket hitch in order to install. Drilling is required for install.
- Works on vehicles without a hitch receiver
- Dually applications may require the use of (#A7004 Dually Adapter Kit) Measure from front of camper slide in point to the rear anchor point. If total is 90" or less, use Dually Adapter Kit
- Requires a Factory installed hitch receiver with an open ended cross tube

16 Designed to work with the factory installed running board / bed access steps that extends past the cab and onto the bed, Tie Down is not adjustable in height.

17 SuperHitch Magnum 20K/30K D1102M requires R3503/ R3503A rear tie downs
SuperHitch Magnum 20K D1101M requires R3503/R3503A Rear TD

18 Toyota Tacoma's with a 5' bed & running boards / bed access steps under the cab will need to remove the running boards / bed access steps to install this tie down.

19 This Tie Down is used with the SuperHitch Hero

20 Will not work with aftermarket Mopar rear mounted kick out steps that are mounted under the bumper

21 This SuperHitch Original 17K/20K Tie Down is also used with SuperHitch Magnum 20K/30K
22 This Tie Down mounts to the cab mount, you will need to remove the running boards / bed access steps to install this tie down.

23 Using older one piece SuperHitch, for rear tie down, please call 800.246.8132

24 Use #C3201 for rear Tie Down when used with C1202 SuperHitch

25 There are no factory hitch options available for this vehicle. Hitches installed on this truck were dealer installed aftermarket hitches. Please search for your rear tie downs under the AfterMarket column.

26 Designed to be used with the OEM cross tube that comes installed on the vehicle without a hitch receiver from the factory.

27 Will not work with Hidden Power due to Tie Down design.

28 Works with NO running boards / bed access steps, including the ones that are just under the cab. If you have running boards / bed access steps under your cab, you will need front tie down D1217.

29 Works with any factory running boards / bed access steps, including the ones that are just under the cab.

30 Due to compressor location this Tie Down can't be installed with factory airbags

H Indicates that drilling will be required. The number following designates the total number of holes drilled for installation. (example: H4=4 holes drilled)

STEP

2

Choose your Rear Tie Downs:

If the vehicle has a rear hitch, please
select which type of hitch

			Factory Hitch	SuperHitch	AfterMarket
	YEAR	MODEL (CAB TYPE)	BED LENGTH	MFG#	MFG#
FORD	00-11	Ranger (All Cabs)	6'	F3004 (15)	-
	81-97	F150 (Square Body)	All	(25)	-
	81-97	F250 HD (Square Body)	6.5'	(25)	R3503 (23)
	81-97	F250 HD (Square Body)	8'	(25)	R3503 (23)
	81-97	F350 HD (Square Body)	All	(25)	R3503 (23)
	97-03	F150/F250 LD (All Cabs)(Round Body)	All	F3001 (15)	-
	99-04	F250/F350 (All Cabs)	All	F3001 (15)	R3503 (1,23)
	04-05	F150 (All Cabs)	All	F3003 (8)	-
	05-10	F250/F350 (All Cabs)	All	F3004 (15)	R3503 (1,23)
	06-14	F150 (All Cabs)	All	F3005 (8)	-
	05-15	F350/F450 / F550 Cab & Chassis (34" Frame Only)	N/A	-	R3503 (1,23)
	09-14	F150 (All Cabs/No Bed Stepside)	All	F3005 (8)	R3508 (19)
	11-15	F250/F350 (All Cabs)	All	F3006 (15)	R3503 (1,23)
	2015	F150 (Crew Max)	6.5'	F3007	-
	07-12	CANYON/Colorado	6'	-	-
CHEVROLET	88-94	1500/2500 (All Cabs)	All	C3201 (15)	R3503 (23)
	91-94	3500	8'	C3201 (15)	R3503 (23)
	95-98	1500/2500	All	C3202 (15)	R3503 (23)
	95-00	3500	8'	C3202 (15)	R3503 (23)
	99-13	1500/2500 Classic LD 5.5" Frame (All Cabs)	8'	C3204 (8)	R3503 (23)
	99-07	1500/2500 Classic LD 5.5" Frame (All Cabs)	6.5'	C3203 (8)	-
	01-07	1500/2500/3500 Classic HD 8" Frame (All Cabs)	8'	C3206 (7,8)	R3503 (1,23)
	01-07	1500/2500/3500 Classic HD 8" Frame (All Cabs)	6.5'	C3205 (7,8)	R3503 (1,23)
	04-07	1500 Classic (Crew Cab Only)	5.5'	C3203 (8)	-
	07-10	2500/3500 New Body (All Cabs)	8'	C3209 (15)	R3503 (1,23)
	07-10	2500/3500 New Body (All Cabs)	6.5'	C3209 (15)	R3502 (21)
	07-13	1500 New Body (All CABS)	6.5' & 5.5'	C3203 (8)	R3507 (19)
	07-13	1500 New Body (Standard & EXT Cab)	8'	C3204 (8)	R3507 (19)
	11-14	2500/3500 HD All cabs	All	C3212 (13,21)	C3212 (21)
	14-15	1500 (All cabs)	All	C3214	R3509 (19)
	2015	2500/3500 HD All cabs SRW	All	C3215	C3216
	2015	2500/3500 HD All cabs DRW	All	C3217	C3216
NISSAN	00-04	Frontier (All Cabs)	All	-	-
	05-14	Frontier (Crew/King Cab 2 and 4 door)	5' and 6'	N3403 (8)	-
	04-14	Titan (King/Crew Cab 2 and 4 door)	All	N3401 (8)	-

Footnotes

- SuperHitch Magnum 20K/30K requires the use of Tie Down R3504 or Talon Tie Down R3504A
- Drilling may be required into the Spring Hanger Bracket which is welded to the frame
- Drilling may be required for Installation
- May require modifications to the running board / bed access steps brackets to install Tie Downs
- Additional labor required for installation of Tie Downs
- Front Tie down is available in adjustable Tie Down style only
- Fits Classic Body Style only
- Will also work on vehicles without a hitch receiver
- The Toyota HD Tow package attaches to the side and bottom of the vehicles frame. The Standard Toyota Tow package attaches to the bottom of the vehicles frame only
- To determine the correct fit: 1500 & 2500 model / Classic body style vehicle owners must measure the vehicle frame height at the back of the truck next to the spare tire. If the frame is 5.5" tall it requires the LD application, If the frame is 8" tall it requires the HD application
- Will work with aftermarket hitches that do not have side plates that attach to the bottom of the frame
- Tie down requires 4"x4" footprint on the side plate of the aftermarket hitch in order to install. Drilling is required for install.
- Works on vehicles without a hitch receiver
- Dually applications may require the use of (#A7004 Dually Adapter Kit) Measure from front of camper slide in point to the rear anchor point. If total is 90" or less, use Dually Adapter Kit
- Requires a Factory installed hitch receiver with an open ended cross tube
- Designed to work with the factory installed running board / bed access steps that extends past the cab and onto the bed, Tie Down is not adjustable in height.
- SuperHitch Magnum 20K/30K D1102M requires R3503/ R3503A rear tie downs
SuperHitch Magnum 20K D1101M requires R3503/R3503A Rear TD
- Toyota Tacoma's with a 5' bed & running boards / bed access steps under the cab will need to remove the running boards / bed access steps to install this tie down.
- This Tie Down is used with the SuperHitch Hero
- Will not work with aftermarket Mopar rear mounted kick out steps that are mounted under the bumper
- This SuperHitch Original 17K/20K Tie Down is also used with SuperHitch Magnum 20K/30K
- This Tie Down mounts to the cab mount, you will need to remove the running boards / bed access steps to install this tie down.
- Using older one piece SuperHitch, for rear tie down, please call 800.246.8132
- Use #C3201 for rear Tie Down when used with C1202 SuperHitch
- There are no factory hitch options available for this vehicle. Hitches installed on this truck were dealer installed aftermarket hitches. Please search for your rear tie downs under the AfterMarket column.
- Designed to be used with the OEM cross tube that comes installed on the vehicle without a hitch receiver from the factory.
- Will not work with Hidden Power due to Tie Down design.
- Works with NO running boards / bed access steps, including the ones that are just under the cab. If you have running boards / bed access steps under your cab, you will need front tie down D2127.
- Works with any factory running boards / bed access steps, including the ones that are just under the cab.
- Due to compressor location this Tie Down can't be installed with factory airbags
- H Indicates that drilling will be required. The number following designates the total number of holes drilled for installation. (example: H4=4 holes drilled)

STEP

3

Basic
Springload
Kit

GOOD



TLI PART# S9000

BETTER

SpringloadXL



TLI PART # S9050A

BEST

FastGun

SS Polished
MFG# S9526SS Grey
MFG# S9522SS Black
MFG# S9529SS Bright White
MFG# S9530CHOOSE YOUR TORKLIFT
TURNBUCKLES

*TURNBUCKLES SOLD SEPARATELY

TORKLIFT
INTERNATIONAL
OVER 35 YEARS OF INNOVATION, QUALITY, SAFETY.

The latest 2015 part numbers are just a click
away! Visit the online automated application
guide available 24/7 at TORKLIFT.COM

For fast and friendly tech support
call us at **1-800-246-8132**

STEP

1

Choose your Front Tie Downs:

Does the truck have running boards that
extend past the cab and onto the bed?

No

Yes

	YEAR	MODEL (CAB TYPE)	BED LENGTH	MFG#	MFG#
DODGE	97-04	Dakota (ALL Cabs)	6'	D2104	-
	2005	Dakota (Quad-Cab only)	5.5'	D2114	-
	05-10	Dakota (ALL Cabs)	6'	D2109	-
	89-93	D150 / D250 / D350 (All Cabs)	8'	F4000 (3,4,5,6,H4)	F4000 (3,4,5,H4)
	94-01	1500 (All Cabs)	6.5'	D2110	D4104 (3,4,5,H4)
	94-02	1500/2500 / 3500 (All Cabs)	8'	D2100 (3,H2)	D4100 (3,4,5)
	94-02	2500 / 3500 (All Cabs)	6.5'	D2110	D4104 (3,4,5,H4)
	02-08	1500 (All Cabs)	8'	D2107 (3, H2)	-
	02-08	1500 2wd (All Cabs except Mega)	6.5'	D2106	-
	02-08	1500 4wd (All Cabs except Mega)	6.5'	D2105	-
	03-08	2500/3500 4x2 HD (NO Mega-cab)	6.5'	D2103 (2,H2)	-
	06-08	1500 2wd (Mega-cab only)	6.5'	D2111	-
	06-08	1500 4wd (Mega-cab only)	6.5'	D2102	-
	03-09	2500 / 3500 HD (All Cabs)	8'	D2101	D4101 (4,5)
	03-09	2500 / 3500 4wd HD (All Cabs)	6.5'	D2102 (2)	D4102 (2,3,4,5)
	06-09	2500 / 3500 2wd (Mega-cab only)	6.5'	D2111	-
	07-11	3500 / 4500 / 5500 (Cab & Chassis Only)	N/A	D2112	-
	09-12	1500 4wd (Quad-cab only, NO Laramie)	6.5'	D2121	-
	10-12	2500 / 3500 (All Cabs)	8'	D2115	D4101 (4,5)
	10-12	2500 / 3500 4wd (SRW) (All Cabs)	6.5'	D2115	D4106 (4,16)
	10-12	3500 (DRW) (All Cabs)	6.5'	D2120	D4106 (4,16)
	2013	2500 (All Cabs)	8'	D2118	D4105 (4,5)
	2013	2500 (SRW) (All Cabs)	6.5'	D2119	D4106 (4,16)
	2013	3500 (DRW)(All Cabs except Mega Cab)	6.5'	D2120	D4106 (4,16)
	2013	3500 (Crew Cab)	8'	D2124	-
	2013	3500 (DRW) (Mega Cab)	6.5'	D2125	-
	2013	3500 (SRW) (All Cabs)	6.5'	D2123	D2128
	13-14	1500 4wd (Regular/Quad-cab only, NO Laramie)	6.5'	D2121	-
	2015	1500 4wd (Quad Cab, Crew Cab)	6.5'	D2121	N/A
	2015	1500 2wd (Regular Cab)	6.5'	D2121	-
	14-15	1500 2wd (Quad Cab)	6.5'	D2121	N/A
	2014	2500 Gas Engine (Regular Cab)	8'	D2126(28)	D2127 (29)
	14-15	2500 Crew Cab/Mega Cab	6.5'	D2126(28)	D2127 (29)
	14-15	3500 4wd Diesel Engine (SRW)(Mega/Crew Cab)	6.5'	D2123	D2128
	14-15	3500 4wd Diesel Engine (DRW)(Mega Cab)	6.5'	D2125	-
	2014	2500/3500 (DRW or SRW)(Crew Cab)	8'	D2124 (30)	D2127 (29)
	2015	2500 (Crew Cab)	All	D2126(28)	D2127 (29)
	2015	3500 (SRW & DRW)(Crew Cab)	8'	D2124 (30)	D2127 (29)
TOYOTA	98-04	Tacoma (ALL Cabs)	6'	T2306	-
	05-14	Tacoma 4wd only All Cab	All	T2303 (18)	-
	05-14	Tacoma 2wd only All Cab	All	T2308 (18)	-
	2015	Tacoma 4wd only double cab	6.5'	T2308 (18)	-
	00-06	Tundra (Standard & HD Tow PKG All Cabs)	6.5'	T2301	-
	00-06	Tundra (Standard & HD Tow PKG All Cabs)	8'	T2302	-
	07-15	Tundra 4wd (Crew Max Only)	5.5'	T2307	-
	07-11	Tundra (All Cabs)	6.5'	T2304	-
	07-14	Tundra (All Cabs)	8'	T2305	-
	15	Tundra (Double Cab only)	8'	T2305	-
	12-15	Tundra (Double Cab only)	6.5'	T2309	-


TORKLIFT
 INTERNATIONAL

OVER 35 YEARS OF INNOVATION, QUALITY, SAFETY.

 The latest **2015** part numbers are just a click
 away! Visit the online automated application
 guide available **24/7** at **TORKLIFT.COM**

 For fast and friendly tech support
 call us at **1-800-246-8132**

STEP

2

Choose your Rear Tie Downs:

If the vehicle has a rear hitch, please
select which type of hitch

Factory Hitch

SuperHitch

AfterMarket

	YEAR	MODEL (CAB TYPE)	BED LENGTH	MFG#	MFG#	MFG#
DODGE	97-04	Dakota (ALL Cabs)	6'	D3105 (15)	-	R3500 (12,H8)
	2005	Dakota (Quad-Cab/Extended Cab)	5.5' and 6.5'	-	-	R3500 (12,H8)
	06-10	Dakota (ALL Cabs)	6'	D3106	-	R3500 (12,H8)
	89-93	D150 / D250 / D350 (All Cabs)	8'	-	R3503 (23)	R3501 (12,H8)
	94-01	1500 (All Cabs)	ALL	D3101 (15)	-	R3500 (12,H8)
	94-02	2500 / 3500 (All Cabs)	ALL	D3101 (15)	R3503 (23)	R3500 (12,H8)
	02-03	1500 (All Cabs)	ALL	D3103	-	R3500 (12,H8)
	04-08	1500 (All Cabs)	ALL	D3109 (8,11,14,20)	-	R3500 (12,H8)
	03-09	2500 / 3500 HD (All Cabs)	ALL	D3109 (8,11,14,20)	R3503 (14,17,20,23)	R3500 (14,12,H8)
	10-12	2500 / 3500 HD (All Cabs)	ALL	D3109 (8,11,14,20)	R3505 (14,20,21,23)	R3500 (14,12,H8)
	07-15	3500 / 4500 / 5500 (Cab & Chassis)	N/A	-	R3503 (1)	R3500 (12,H8)
	09-14	1500 (All cabs)	All	D3107 (15)	R3507 (19)	R3500 (12,H8)
	2015	1500 (Regular Cab)	8'	D3107 (15)	N/A	R3500 (12,H8)
	2015	1500 (All Cabs)	6.5'	D3107 (15)	R3507 (19)	R3500 (12,H8)
	2015	1500 (Crew Cab)	5.5'	D3107 (15)	R3507 (19)	R3500 (12,H8)
TOYOTA	13-15	2500/3500 (All Cabs)	All	D3109 (8,11,14,20)	R3507 (14,20,21)	R3500 (14,12,H8)
	98-04	Tacoma (ALL Cabs)	6'	T3305 (13)	-	R3500 (12,H8)
	05-14	Tacoma All Cab	All	T3303	-	R3500 (12,H8)
	2015	Tacoma Double Cab	5', 6.5'	T3303	-	R3500 (12,H8)
	00-06	Tundra (Standard Tow PKG All Cabs)	ALL	T3301 (8,9)	-	R3500 (12,H8)
	00-06	Tundra (HD Tow PKG All Cabs)	8'	T3302 (9)	-	R3500 (12,H8)
	03-06	Tundra (HD Tow PKG All Cabs)	6.5'	T3302 (9)	-	R3500 (12,H8)
	07-13	Tundra (All cabs)	All	T3304	-	R3500 (12,H8)
	14-15	Tundra (All cabs)	All	T3306	T3306	R3500 (12,H8)

Footnotes

- SuperHitch Magnum 20K/30K requires the use of Tie Down R3504 or Talon Tie Down R3504A
- Drilling may be required into the Spring Hanger Bracket which is welded to the frame
- Drilling may be required for Installation
- May require modifications to the running board / bed access steps brackets to install Tie Downs
- Additional labor required for installation of Tie Downs
- Front Tie down is available in adjustable Tie Down style only
- Fits Classic Body Style only
- Will also work on vehicles without a hitch receiver
- The Toyota HD Tow package attaches to the side and bottom of the vehicles frame. The Standard Toyota Tow package attaches to the bottom of the vehicles frame only
- To determine the correct fit: 1500 & 2500 model / Classic body style vehicle owners must measure the vehicle frame height at the back of the truck next to the spare tire. If the frame is 5.5" tall it requires the LD application, If the frame is 8" tall it requires the HD application
- Will work with aftermarket hitches that do not have side plates that attach to the bottom of the frame
- Tie down requires 4"x4" footprint on the side plate of the aftermarket hitch in order to install. Drilling is required for install.
- Works on vehicles without a hitch receiver
- Dually applications may require the use of (#A7004 Dually Adapter Kit) Measure from front of camper slide in point to the rear anchor point. If total is 90" or less, use Dually Adapter Kit
- Requires a Factory installed hitch receiver with an open ended cross tube
- Designed to work with the factory installed running board / bed access steps that extends past the cab and onto the bed, Tie Down is not adjustable in height.
- SuperHitch Magnum 20K/30K D1102M requires R3503/ R3503A rear tie downs
SuperHitch Magnum 20K D1101M requires R3503/R3503A Rear TD
- Toyota Tacoma's with a 5' bed & running boards / bed access steps under the cab will need to remove the running boards / bed access steps to install this tie down.
- This Tie Down is used with the SuperHitch Hero
- Will not work with aftermarket Mopar rear mounted kick out steps that are mounted under the bumper
- This SuperHitch Original 17K/20K Tie Down is also used with SuperHitch Magnum 20K/30K
- This Tie Down mounts to the cab mount, you will need to remove the running boards / bed access steps to install this tie down.
- Using older one piece SuperHitch, for rear tie down, please call 800.246.8132
- Use #C3201 for rear Tie Down when used with C1202 SuperHitch
- There are no factory hitch options available for this vehicle. Hitches installed on this truck were dealer installed aftermarket hitches. Please search for your rear tie downs under the AfterMarket column.
- Designed to be used with the OEM cross tube that comes installed on the vehicle without a hitch receiver from the factory.
- Will not work with Hidden Power due to Tie Down design.
- Works with NO running boards / bed access steps, including the ones that are just under the cab. If you have running boards / bed access steps under your cab, you will need front tie down D1217.
- Works with any factory running boards / bed access steps, including the ones that are just under the cab.
- Due to compressor location this Tie Down can't be installed with factory airbags
- H Indicates that drilling will be required. The number following designates the total number of holes drilled for installation. (example: H4=4 holes drilled)

STEP

3

Basic
Springload
Kit

GOOD



TLI PART # S9000

BETTER

SpringloadXL



TLI PART # S9050A

BEST

FastGun

SS Polished
MFG# S9526SS Grey
MFG# S9522SS Black
MFG# S9529SS Bright White
MFG# S9530CHOOSE YOUR TORKLIFT
TURNBUCKLES

*TURNBUCKLES SOLD SEPARATELY

TORKLIFT
INTERNATIONAL

OVER 35 YEARS OF INNOVATION, QUALITY, SAFETY.

The latest 2014 part numbers are just a click
away! Visit the online automated application
guide available 24/7 at TORKLIFT.COM

For fast and friendly tech support
call us at 1-800-246-8132

ALUMINUM TIE DOWNS

STEP

1

Choose your Front Tie Downs:

Does the truck have running boards that extend past the cab and onto the bed?

No

Yes

	YEAR	MODEL (CAB TYPE)	BED LENGTH	MFG#	MFG#
FORD	99-07	F250/F350 (All Cabs)	8'	F2011A	-
	99-07	F250/F350 (All Cabs)	6.75'	F2007A	-
	08-10	F250/F350/F450 (All Cabs)	8'	F2011A	-
	11-15	F250/F350/F450 (All Cabs)	8'	F2016A (27)	-
	06-14	F150 (All Cabs, No Bed Stepside)	6.5'	F2014A	-
DODGE	03-12	2500 / 3500 HD (All Cabs)	8'	D2101A	-
	2013	3500 (DRW) (Mega Cab)	6.5'	D2125A	-
	2013	3500 (SRW) (All Cabs)	6.5'	D2123A	D2128A
	2014	2500 Gas Engine (Regular Cab)	8'	D2126A(28)	D2127A (29)
	14-15	2500 Crew Cab/Mega Cab	6.5'	D2126A(28)	D2127A (29)
	14-15	2500/3500 (DRW or SRW)(Crew Cab)	8'	D2124A	D2127A (29)
	14-15	3500 4wd Diesel Engine (SRW)(Mega/Crew Cab)	6.5'	D2123A	D2128A
	14-15	3500 4wd Diesel Engine (DRW)(Mega Cab)	6.5'	D2125A	-
	2015	3500 4wd Diesel Engine (SRW)(Crew Cab)	8'	D2124A	-
	2015	3500 4wd Diesel Engine (SRW) (Crew Cab)	6.5'	D2123A	D2128A
CHEVY	11-15	2500 / 3500 HD (Crew / Ext. / Double Cab Only)	8'	C2214A	-
	01-10	1500 / 2500 / 3500 Classic & New Body HD 8" Frame (All Cabs)	8'	C2204A(10)	-
	01-10	1500 / 2500 / 3500 Classic & New Body HD 8" Frame (All Cabs)	6.5'	C2205A(10)	-
	11-15	2500 / 3500 HD (Crew / Ext. Cab / Double Cab Only)	6.5'	C2220A	-

STEP

2

Choose your Rear Tie Downs:

If the vehicle has a rear hitch, please select which type of hitch

Factory Hitch

SuperHitch

	YEAR	MODEL (CAB TYPE)	BED LENGTH	MFG#	MFG#
FORD	00-11	Ranger (All Cabs)	6'	F3001A (15)	-
	81-97	F250 HD (Square Body)	6.5' , 8'	-	R3503A (23)
	81-97	F350 HD (Square Body)	ALL	-	R3503A (23)
	97-03	F150 / F250 LD (All Cabs)(Round Body)	ALL	F3001A (15)	-
	99-10	F250 / F350 (All Cabs)	ALL	F3001A (15)	R3503A (1,23)
	05-15	F350/F450 / F550 Cab & Chassis (34" Frame Only)	N/A	-	R3503A (1,23)
	06-14	F150 All Cabs	ALL	F3005A	-
	09-14	F150 (All Cabs/No Bed Stepside)	5.5" & 6.5'	-	R3508A (19)
DODGE	11-15	F250 / F350 / F450 (ALL Cabs)	ALL	F3001A (15)	R3503A (1,23)
	89-93	D150 / D250 / D350 (All Cabs)	8'	-	R3503A (14,20,21,23)
	94-02	2500 / 3500 (All Cabs)	ALL	-	R3503A (14,20,21,23)
	04-08	1500/all cabs	ALL	D3109A (8,11,14,20)	-
	03-12	2500/3500 (All Cabs)	ALL	D3109A (8,11,14,20)	R3503A (14,20,21,23)
	09-14	1500 (All cabs)	ALL	-	R3507A (19)
	13-15	2500/3500 (All Cabs)	ALL	D3109A (8,11,14,20)	R3507A (14,20,21)
	88-94	1500 / 2500 (All Cabs)	ALL	-	R3503A (23)
CHEVY	91-94	3500	8'	-	R3503A (23)
	95-98	1500 / 2500	ALL	-	R3503A (23)
	95-00	3500	8'	-	R3503A (23)
	99-13	1500 / 2500 Classic LD 5.5" Frame (All Cabs)	8'	-	R3503A (23)
	01-07	1500 / 2500 / 3500 Classic HD 8" Frame (All Cabs)	6.5'	C3205A	R3503A (1,23)
	01-07	1500 / 2500 / 3500 Classic HD 8" Frame (All Cabs)	8'	C3206A	R3503A (1,23)
	07-10	2500/3500 NEW BODY (All Cabs)	ALL	C3206A	R3503A (1,23)
	07-13	1500 New Body (ALL CABS)	6.5' & 5.5	-	R3507A (19)
	07-13	1500 New Body (Standard & EXT Cab)	8'	-	R3507A (19)
	11-14	2500 / 3500 (ALL Cabs)	ALL	C3212A (13,21)	C3212A (13,21)
	2014	1500 (All cabs)	ALL	-	R3509A (19)
	2015	2500 / 3500 (ALL Cabs) SRW	ALL	C3215A	-
TOYOTA	08-15	Tundra (All cabs)	All	-	R3507A (19)

TORKLIFT TURNBUCKLES

FastGun

Part#	Fig. #	Description
-------	--------	-------------

FastGun - Long Range (25" - 43")

S9522	1	Stainless Steel Powder Coated Grey
S9523	1	Stainless Steel Powder Coated White
S9529	1	Stainless Steel Powder Coated Black
S9526	-	Stainless Steel Polished
S9500	2	Turnbuckle Locks - (4 locks)

FastGun - Short Range (14.5" - 21.5")

S9520	3	Stainless Steel Powder Coated Grey
S9521	-	Stainless Steel Powder Coated White
S9527	-	Stainless Steel Polished

Kit includes 2 turnbuckles

Springload

Part#	Fig. #	Description
-------	--------	-------------

S9050A	4	Springload XL, Reaches from 28" - 43", Kit includes 2 turnbuckles
S9000	5	Basic Springload Kit, includes 2 SpringLoad units, 2 heavy duty forged steel turnbuckles and chain

Derringer

Part#	Fig. #	Description
-------	--------	-------------

S9528	6	Derringer Handle, (set of 4 handles)
S9500	2	Turnbuckle Locks - (4 locks)

AnchorGuard Derringer

Part#	Fig. #	Description
-------	--------	-------------

S9020	7	Set includes 4 quick disconnect Derringer Handles, 2 front springloaded turnbuckles 18.5" - 25.5" reach, and 2 rear cushioned turnbuckles 28.5" - 34.5" reach
S9500	2	Turnbuckle Locks - (4 locks)

AnchorGuard

Part#	Fig. #	Description
-------	--------	-------------

S9013	8	Kit includes 2 front springloaded turnbuckles 16.5" - 23.5" reach, and 2 rear cushioned turnbuckles 31" - 34.25"
-------	---	--



Fig. 1



Fig. 2



Fig. 3



Fig. 4



Fig. 5



Fig. 6



Fig. 7



Fig. 8

AIR HELPER SPRINGS



Ride Rite Box

Ride-Rite Rear Kit Applications

Model	Model Year	Rear Kit #
<i>Cadillac SUV's</i>		
Escalade, ESV, EXT	2002-2015	4108
Escalade, ESV, EXT (w/ Autoride Suspension)	2011-2014	4186
<i>Chevy/GMC Pickup Trucks</i>		
Colorado, Canyon 2 & 4WD (will not fit ZQ8)	2004-2012	2384
C & K-1500 Silverado, Sierra, 2 & 4 WD (not HD)	1999-2006	2320
C & K-1500 Silverado, Sierra, 2 & 4 WD	2007-2015	2430
C-1500HD Silverado, Sierra, 2 & 4 WD	2005-2006	2190
C-2500 Silverado, Sierra, 2 & 4 WD (not HD)	2001-2003	2190
C-2500HD Silverado, Sierra, 2 & 4 WD	2001-2010	2250
C-3500HD Silverado, Sierra, 2 & 4 WD	2001-2010	2250
C-2500HD, Silverado, Sierra, 2 & 4 WD	2011-2015	2528
C-3500 HD, Silverado, Sierra, 2 & 4 WD	2011-2015	2528
<i>Chevy/GMC Commercial Vehicles (w/o factory bed)</i>		
C-2500HD, C-3500HD, 2 & 4 WD	2001-2010	2249
C-4500, C-5500	2002-2009	2362
G3500, G4500 (with dual rear wheels)	1998-2013	2173
C3500 HD, 2 & 4 WD	2011-2012	2176
<i>Chevy/GMC Vans</i>		
G-1500 (6 lug nuts)	2003-2009	2423
G-2500, G-3500 (8 lug, over 8000 lbs. GVW, SRW)	2003-2015	2337
Uplander	2005-2009	4155
<i>Chevy/GMC SUV's</i>		
Avalanche 1500, 2 & 4 WD	2002-2013	4108
Avalanche 1500, 2 & 4 WD, Suburban 1500, Tahoe, Yukon (w/ Autoride Suspension)	2011-2015	4186
Denali XL 2500, Yukon XL 2500, 2 & 4 WD	2000-2009	2253
Suburban 1500, Tahoe, Yukon 1500, 2 & 4 WD	2000-2015	4108
Suburban 2500, 2 & 4 WD	2000-2009	2253
Trailblazer, 2 & 4 WD	2002-2009	4108
<i>Dodge Pickup Trucks</i>		
Dakota Club Cab, 2 & 4 WD	2005-2011	2378
Dakota Quad Cab, 2 & 4 WD	2005-2011	2379
Ram 1500, 2 & 4 WD	2002-2008	2286
Ram 1500, Mega Cab, 2 & 4 WD	2006-2008	2299
Ram 1500, 2 & 4 WD	2009-2013	2518/4190
Ram 2500/3500, 2 & 4 WD	2003-2013	2299
Ram 2500 4WD	2014-2015	2580
Ram3500 2WD	2014	2579
Ram 3500 4WD	2013-2014	2560



AIR HELPER SPRINGS

Ride-Rite Rear Kit Applications

Model	Model Year	Rear Kit #
<i>Dodge SUV's</i>		
Durango, 2 & 4 WD	1997-2002	2222
Durango, 2 & 4 WD	2004-2009	4152
Durango, 2 & 4 WD	2011-2015	4184
<i>Dodge Commercial Trucks & Vans</i>		
Ram 2500/3500, 2 & 4 WD (SRW only) not dually	2004-2008	2299
Ram 3500, 4 WD only (dual wheels only)	2006-2012	2299
Ram 3500HD, 2 & 4 WD, cab & chassis	2007-2014	2478
Sprinter 2500 van, cab & chassis	2003-2006	2312
Sprinter 3500 van, cab & chassis	2003-2008	2382
<i>Ford Trucks Model</i>		
F-150 2 & 4 WD (not Raptor or FX2)	2004-2014	2525
F-150 Raptor 4WD	2009-2014	2565
F-150 2 & 4 WD with B & W Hitch	2004-2014	2542
F-150 2 & 4WD	2015	2582
F-250, F-350 2 & 4 WD Diesel	2011-2015	2535
F-250, F-350 2 & 4 WD Gasoline	2011-2015	2550
F-250, F-350 4 WD Only	2005-2007	2400
F-250 2 WD Only	2005-2007	2398
F-350 2 WD Only	2005	2398
F-350 2 WD Only	2008-2010	2550
F-250, F350 2 & 4 WD	1999-2004	2550
<i>Ford Commercial Vehicles (w/o factory bed)</i>		
E-250	2007-2008	2061
E-350 (with rear dual wheels)	1992-2014	2061
F-350, 2 & 4 WD	1999-2008	2176
F-450 Cab & Chassis	2005-2015	2176
E-450	1996-2007	2377
E-450	2008-2014	2458
<i>Ford Vans</i>		
Transit Connect	2010-2013	2485
E-150	1975-2007	2171
E-150	2008-2014	2488
E-250	1998-2014	2165
E-350 (with single rear wheels)	1998-2014	2181
<i>Ford SUV's</i>		
Excursion, 2 WD	2000-2006	2255
Excursion, 4 WD	2000-2006	2251
Explorer	2011-2015	4189



Ride Rite Kit



Sport Rite Kit



Coil Rite Kit



AIR ACCESSORY SYSTEMS

The Firestone air accessory systems provide an instant air source for all air suspension products. Simply flip a switch and adjust the ride for various load and road conditions. We also carry air accessory service parts and individual components, providing you with a wide variety of air control assist solutions.



Fig. 1



Fig. 2



Fig. 3



Fig. 4



Fig. 5

Standard Duty

Part #	Fig.#	Description
2158	1	This kit features a single white-face gauge and standard-duty compressor (9284). Ideal for light towing applications.
2178	2	This kit features a dual white-face gauge and standard-duty compressor (9284). Ideal for light use on off-center loads such as: Slide-in campers, vans and motorhomes.
2491	-	This kit provides fingertip control of your air springs using a light duty compressor (9377). Inflates two bags individually, digital.
2554	-	This <u>wireless</u> kit provides fingertip control of your air springs using a standard duty compressor (9377).

Heavy Duty

Part #	Fig.#	Description
2097	-	This kit features a single white-face gauge and heavy-duty compressor (9285). Ideal for frequent usage on towing applications. Kit includes: Single gauge, HD compressor, air line, fittings, filter and fasteners.
2219	3	Kit includes: Dual gauge, HD compressor (9285), air line, fittings, filter and fasteners. Ideal for use on off-center loads such as: Slide-in Campers, Utility vehicles and Motorhomes.
2168	4	This kit features a dual white-face gauge, heavy-duty compressor (9285), air reservoir and a 25-foot inflation hose for emergency tire inflation. Ideal for use on: Tow trucks, off road applications and motorhomes.
2047	-	These kits are compressor (9285) and air tank combinations. Gauges are NOT included. These air accessory systems are used in conjunction with our automatic leveling systems and with quad gauge for RVs. 2047 Kit includes: HD compressor, 1/2-gallon air tank, 25-foot extension hose, air line, fittings, filter and fasteners.
2239	-	This kit offers an onboard air source for inflating air springs, tires, and other pneumatic components. Kit includes: Heavy duty compressor (9285), 3 gallon air tank, and a 25' extension hose with inflation wand.

Super Heavy Duty

Part #	Fig.#	Description
2198	5	This kit features a dual white-face gauge, 1-gallon air reservoir, super heavy-duty air compressor (9285) and a 25-foot extension hose for emergency inflation or tires or other inflatables. Ideal for use on: Construction vehicles and Motorhomes.







* Systems inflate two bags equall

** Systems inflate two bags individuall

















RIDE-RITE SERVICE PARTS

Dealer Fitting Packs

2359  Dealer Fitting Pack 1 includes 4 each: 1/4" union tees, inflation valves, 1/4 NPT elbow fittings	2360  Dealer Fitting Pack 2 includes 4 each: 1/4" union tees, inflation valves, 1/4 NPT elbow fittings and 2 each: 1/4" unions, 1/4 NPT straight fittings	2395  Dealer Fitting Pack 3 includes 6 each: 1/4 NPT elbow fittings, inflation valves and 2 each: union tees, 1/4 NPT straight fittings. Also includes 100' of 1/4" air line tubing
2012  Ride-Rite™/Sport-Rite™ Air Line Service Kit includes 18' of red 1/4" air line, two 1/4 NPT el- bow fittings, one union tee, and two inflation valves	2131  Coil-Rite™ Air Line Service Kit includes 18' of blue 1/4" air line with attached elbow fittings, two inflation valves, tie wraps, and fasteners	 Air Line Tubing 0938 1/4", 18' red 9145 1/4", 100' red

Fitting Pieces

	Union Tee (Packages of 25) 1/4" Tubing 3025 3/8" Tubing 3105		Male Branch Swivel Tee (Packages of 25) 1/4" Tubing 1/8 NPT 3047 3/8" Tubing 1/4 NPT 3279 1/4 NPT 3273
	Male Connector (Packages of 25) 1/4" Tubing 1/8 NPT 3055 3/8" Tubing 1/4 NPT 3046 1/2" Tubing 1/2 NPT 3157 3/8 NPT 3104 3/8 NPT 3154		Male Elbow (Packages of 25) 1/4" Tubing 1/8 NPT 3128 3/8" Tubing 1/4 NPT 3103 1/2" Tubing 1/2 NPT 3289 3/8 NPT 3153 3/8 NPT 3290
	Compressor Tee-3066 (Packaged Individually) 1/4" Tubing 1/8 NPT		Inflation Valve - 3032 (Packaged Individually) 1/4" Tubing
	Pressure Switch (Packaged Individually) 1/8 NPT Male 90-120 PSI 9016 100-150 PSI 9193		Straight Female (Packages of 10)) 1/4" Tubing 1/8 NPT 3082 1/4 NPT 3083
	Sealed Pressure Switch (Packaged Individually) 1/8 NPT Male 90-120 PSI 9401 100-150 PSI 9402		Union (Packages of 10) 1/4" Tubing 3079 1/4"-3/8" Tubing 3114 Unequal Union
	Compressor Check Valve (Packages of 25) 1/8 NPT 9399		Tubing Cutter - 9009 (Packaged Individually)
	Fuse Tap Kit - 2526 (Packaged Individually) The Fuse Tap Kit provides an easy, low- impact method to connect the wire harness to the fuse box without splicing or soldering		Ride-Rite Gloves (Packaged Individually) Small/Med - 9345 Large - 9346

Suspension/StableLoad

YEAR	MAKE/MODEL	Cab and Chassis Only	New Stable Quick Disconnect (Lower Overloads) TLI PART#	StableLoad Upper Overload TLI PART#
UNIVERSAL				
Universal	Truck/SUV/Van/RV/Commercial, etc		A7311 (2,4)	A7202 (3)
FORD				
All	Ranger		A7311 (2,4)	
81-09	F150/F250/F350/F450		A7311 (2,4)	A7200 (3)
10-14	F150		A7310 (1,4)	
10-15	F250/F350/F450		A7310 (1,4)	A7200 (3)
00-15	F350/F450/F550	x		A7200 (3)
01-08	E150 Van		A7311 (2,4)	
05-11	E250/E350 Van		A7311 (2,4,5)	
12-13	E250/E350 Van		A7310 (1,4,5)	
DODGE/STERLING				
95-08	1500		A7311 (2,4)	-
95-13	2500/3500/4500		A7311 (2,4)	A7200 (3)
14-15	3500/4500		A7311 (2,4)	A7200 (3)
14-15	4500/5500	X	-	A7200 (3)
All	Dakota		A7311 (2,4)	-
CHEVY/GMC				
00-13	2500 Suburban/YukonXL		A7310 (1,4)	
All	Canyon/Colorado/s10/Sonoma		A7311 (2,4)	
88-14	1500 trucks		A7310 (1,4)	
2015	1500 trucks		A7310 (1,4,7)	
88-10	3500 trucks		A7310 (1,4,5)	A7200 (3)
11-15	3500 trucks		A7310 (1,4,5)	A7202 (3)
88-15	2500 trucks		A7310 (1,4)	
All	Express/Savana 2500/3500		A7310 (1,4)	
TOYOTA				
All	Tacoma		A7311 (2,4)	-
All	Tundra		A7311 (2,4)	-
NISSAN				
All	Frontier		A7311 (2,4)	-
All	Xterra		A7311 (2,4)	-
All	Titan		A7311 (2,4,6)	-
All	NV 2500/3500		A7311 (2,4)	-
HUMMER				
All	H3 SUVs		A7311 (2,4)	-
MERCEDES				
11-13	Sprinter 2500/3500		A7311 (2,4)	-

Footnotes

(1) A7310 StableLoad is a NO DRILL APPLICATION and requires factory pre-drilled 1/2" diameter holes in lower overload spring. The A7310 Quick Disconnect StableLoad is designed for vehicles that have a lower overload leaf suspension with a hole near each end of the lower overload spring. The lower overload will for the most part be shorter, thicker and will generally have separation from the rest of the spring pack. In most cases, there will be a plastic disk covering the hole in question.

(2) A7311 (WITH DRILL KIT) will fit any passenger or commercial vehicle, Van, SUV, Truck, RV etc, with rear leaf springs and lower overload spring. The lower overload leaf can be identified by being on the very bottom of the spring pack, being thicker than the rest of the leaf springs in the spring pack and generally speaking having a gap between the lower overload leaf spring and the upper leaf spring pack.

-Drilling four 3/8 holes required. Specially treated drill bits and detailed drilling instructions are included.

-Average drill time is 30-40 minutes for complete installation

-Many factory overload springs come pre-drilled with 1/2" holes. Therefore, drilling holes in the overload springs in the same factory locations found on vehicles with pre-drilled holes will have no effect on your springs integrity or operation. The drilled springs (when drilled in accordance with the Torklift International drilling specifications) and the integrity of the springs once drilled are covered under the Torklift International Legendary Lifetime Warranty.

- Some overload springs may have adhesive padding on top of the overload spring. Use a screwdriver or equivalent to remove the padding. This will ensure proper rotation and ease of use.

(3) The A7200 is a NO DRILL APPLICATION and must have factory installed upper overload.

-Will not work in conjunction with SuperSprings

-Due to factory overload engagement design, some applications have progressive engagement, where rear springs will contact first.

-Drilling of rubber pad on some older Dodge applications may be required.

-Depending on the vehicle model, suspension package and condition, actual distance between the StableLoad and vehicle frame overload contact bracket may vary. In some rare instances, when the vehicle is not carrying a load, the StableLoad may come into contact on occasion due to rough road conditions and other anomalies. (#A7201 Spacer kit) is available for vehicles that need additional spacing for the StableLoad to contact the overload spring.

(4) On Quick Disconnect StableLoad (part#'s A7310/A7311) Due to wear and tear after time, some vehicles leaf springs may have minimal clearance with the lower overload for StableLoad engagement / disengagement when the vehicle is unloaded. In order for the vehicle's StableLoad to engage and disengage with minimal effort, a minimum gap of 1/8" is required between the lower overload and the spring pack.

(5) There is no fit for the 3500/E350 Cab and Chassis.


(6) If your Nissan Titan has an axle wrap bracket located at the rear of the lower leaf spring, A7310/A7311 StableLoads will only be installed on the front of the driver and passenger leaf springs.

(7) Due to clearance issues, the StableLoad will only work on the rear of the spring.

TOWING MIRRORS

CIPA Mirrors

Part #	Fits
11950	Clip-On Towing Mirror (single only)
11960	Universal Towing Mirror (single only)
Chevy/GMC/Cadillac	
10000 (pair)	1980-1995 Chevy/GMC Pickups & Vans
11000 (pair)	1982-1993 Chevy S-10, S-15
10200 (pair)	1988-2000 Chevy/GMC Full-Size C/K Pickups; 1992-1999 Chevy/GMC Suburban, Yukon, Kodiak; 1992-1999 Chevy/GMC Tahoe, Dually; 1991-2004 Chevy/GMC Safari, Astro; 1992-1999 Cadillac Escalade
10800 (pair)	1999-2007 Chevy/GMC Silverado, Sierra; 2000-2007 Chevy Tahoe, Suburban, Avalanche; 2000-2007 GMC Denali, Yukon XL; 2000-2007 Cadillac Escalade <i>* will not fit chrome, telescopic or mirrors w/signal</i>
10900 (pair)	2007-2013 New Body-Style Chevy/GMC Silverado, Sierra, Tahoe, Suburban, Avalanche, Denali, Yukon, Yukon XL; 2007-2013 Cadillac Escalade
10950 (pair)	2014-2018 Chevy/GMC Silverado, Sierra
Dodge	
10300 (pair)	1994-1997 Dodge Pickups and Vans <i>* will not fit Dakotas w/black sport mirrors</i>
10500 (pair)	1994-2002 Dodge Old Style 1500, 2500, 3500; 1998-2003 Dodge Durango; 1998-2004 Dodge Dakota; 2000-2003 Dodge Full-Size Van
10700 (pair)	2002-2008 Dodge Ram 1500; 2003-2008 Dodge Ram 2500, 3500
11400 (pair)	2009-2016 Dodge RAM 1500 & 2500
Ford	
11500 (pair)	1992-1997 Ford Full-Size Pickups; 1990-1997 Ford Aerostar Van; 1992-1996 Ford Bronco; 1997 Ford F250 & F350 HD Classic <i>* fits fully black or black w/chrome back</i>
11600 (pair)	1997-2004 Ford F150, F250 Light Duty; 1997-2002 Ford Expedition; 1997-2002 Lincoln Navigator
11800 (pair)	2004-2014 Ford F150 Light Duty; 2004-2014 Ford F250 Light Duty; 2004-2014 Ford F150 XLT; 2004-2014 Ford F250 XLT.
11900 (pair)	1997-2008 Ford F250, F350 Super Duty; 2000-2008 Ford Excursion
Toyota	
11300 (pair)	2007-2014 Toyota Tundra; 2008-2014 Toyota Sequoia

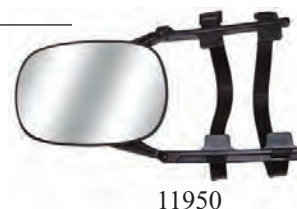

11950



11960



10800



10700



11300



MIRRORS



Fig. 1



Fig. 2



Fig. 3

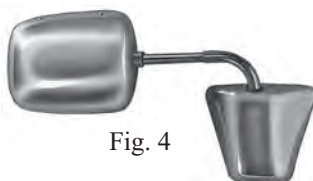


Fig. 4

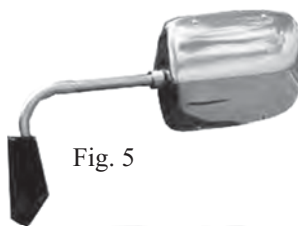


Fig. 5



Fig. 6

Universal Mirrors

Part #	Fig. #	Description
Aluminum Head, Stainless Steel Brackets and Legs		
611505	1	10" Pivot, 7½" x 10½"
611500	1	12" Pivot 7½" x 10½"
Stainless Steel Head, Aluminum Support Arm		
604614	2	Ford Custom, Swing-away Ratchet Design
611580	3	GM 1988 and Older Custom Fit, OEM Mount

Extending Mirrors

Part #	Fig. #	Description
604750	4	Extends up to 8" Beyond Original Setting Fits all Full-Size 1944-2001 Dodge Pickups & 1972-1988 Chevrolet/GMC Pickups
604753	5	Extends up to 8" Beyond Original Setting Fits all Full-Size Chevrolet/GMC Pickups 1988-1998 C/K Body Style, 1992-1999 Suburban/Tahoe/Yukon
604761	6	Extends up to 8" Beyond Original Setting Fits Current Ford Fullsize, Ranger & Bronco II Pickups, Mirror Head not included

RETRAC
A Division of LIVERMORE TRUCK EQUIPMENT, INC.
ISO9001 / QS9000 CERTIFIED

SIX ROBBLEES' INC.
Since 1913

Round Convex Mirrors

Part #	Fig. #	Description
<i>5/16" Center Mounting</i>		
610148	2	5" Round, Polished Stainless Steel , with J-Bracket
610406	1	6" Round, Steel Coated Black
610176	2	6" Round, Bright Anodized Aluminum
610191	2	6" Round, Polished Stainless Steel
610193	2	6" Round Polished Stainless steel with J-Bracket
604978	2	7½" Round, Polished Stainless steel with J-Bracket
604898	2	8" Round, Polished Stainless Steel, with J-Bracket
610713	1	8" Round, Steel Coated Black, with J-Bracket
610673	2	8" Round Polished Stainless Steel with J-Bracket
610676	-	8" Round, Polished Stainless Steel, Heated

5/16" Offset Mounting

609838	3	7½" Round, Polished Stainless Steel with J-Bracket
610551	3	8" Round, Polished Stainless Steel
610556	-	8" Round, Polished Stainless Steel, Heated
609898	3	8½" Round, Polished Stainless Steel with J-Bracket
609946	-	8½" Round, Polished Stainless Steel, Heated

Replacement Heads & Arms

Part #	Fig. #	Description	Size
610815	4	Stainless Steel, Convex Mirror	6½" x 6"
610819	4	White, Convex Mirror	6½" x 6"
610829	5	Stainless Steel, Flat Mirror	6½" x 10"
610827	5	White, Flat Mirror	6½" x 10"
610809	6	Bright Anodized Aluminum	7½" x 10½"
604768	7	Stainless Steel, OEM Replacement	6" x 9"
604769	8	Stainless Steel, OEM Replacement	5" x 8"
605755	-	Gooseneck Mounting Arm	
601690	-	3" Extension, Stainless Steel	

Spot Mirrors

Part #	Fig. #	Description
604770	9	4" x 5½" Rectangular Convex, Stick-On
604771	10	2" Round Convex, Stick-On
604772	10	3" Round Convex, Stick-On
604773	10	3¾" Round Convex, Stick-On



Fig. 1



Fig. 2



Fig. 3



Fig. 4



Fig. 5



Fig. 6



Fig. 7



Fig. 8



Fig. 9



Fig. 10



LUVERNE MUD FLAPS



Textured Mud Guards

Textured Rubber Mud Guards

Year	Application	W x H	Part #
<i>Chevrolet/GMC</i>			
2014-2015	Silverado/Sierra Pickups - Front or Rear	12" x 20"	251440
2007-2013	Silverado/Sierra Pickups - Front or Rear	12" x 20"	250740
2014-2015	Silverado/Sierra Pickups - Front or Rear	12" x 23"	251443
2007-2013	Silverado/Sierra Pickups - Front or Rear	12" x 23"	250743
2015	Silverado/Sierra Dual Wheel - Rear Only	20" x 23"	251554
2007-2014	Silverado/Sierra Dual Wheel - Rear Only	20" x 23"	250744
<i>Dodge</i>			
2009-2015	Ram 1500 - Front Only	12" x 20"	250930
2010-2015	Ram 2500, 3500 - Front Only (Also fits 11-14 3500/4500/5500 Chassis Cab)	12" x 20"	250930
2009-2015	Ram 1500 - Front Only	12" x 23"	250932
2010-2015	Ram 2500, 3500 - Front Only (Also fits 11-14 3500/4500/5500 Chassis Cab)	12" x 23"	250932
2009-2015	Ram 1500 - Rear Only	12" x 20"	250931
2010-2015	Ram 2500, 3500 - Rear Only	12" x 20"	250931
2009-2015	Ram 1500 - Rear Only	12" x 23"	250933
2010-2015	Ram 2500, 3500 - Rear Only	12" x 23"	250933
2002-2008	Ram 1500 - Front or Rear	12" x 20"	250230
2002-2008	Ram 1500 - Front or Rear	12" x 23"	250233
2010-2015	Ram 2500, 3500 Dual Wheel	20" x 23"	251034
2003-2009	Ram 2500, 3500 - Front or Rear	12" x 20"	250230
2006-2009	Ram Mega Cab 2500, 3500	12" x 20"	250230
2003-2009	Ram 2500, 3500 - Front or Rear	12" x 23"	250233
2006-2009	Ram Mega Cab 2500, 3500 - Front or Rear	12" x 23"	250233
2003-2009	Ram 2500, 3500 Dual Wheel	20" x 23"	250334
2006-2009	Ram Mega Cab 2500, 3500 Dual Wheel	20" x 23"	250334
<i>Ford</i>			
2015	F-150 Pickups - Front or Rear	12" x 20"	250520
2004-2014	F-150 Pickups - Front or Rear (Also fits 05-08 Lincoln Mark LT)	12" x 20"	250420
2015	F-150 Pickups - Front or Rear	12" x 23"	250523
2004-2014	F-150 Pickups - Front or Rear (Also fits 05-08 Lincoln Mark LT)	12" x 23"	250423
2008-2015	Super Duty F-Series Pickups - Front or Rear	12" x 20"	251120
2008-2015	Super Duty F-Series Pickups - Front or Rear	12" x 23"	251123
2011-2015	Super Duty F-Series Dual Wheel - Rear Only	20" x 23"	251124
1999-2010	Super Duty F-Series Dual Wheel - Rear Only	20" x 23"	259924
<i>Universal (Drilling Required)</i>			
ALL	Universal Fit for applications not listed above	12" x 20"	251220
ALL	Universal Fit for applications not listed above	12" x 23"	251223
ALL	Universal Fit for applications not listed above	14" x 23"	251014

LUVERNE
TRUCK EQUIPMENT



Heavy Weight Bedmat Applications

Model	Model Year	Bed Length	Size	Part #
<i>Chevrolet/GMC</i>				
2007-2015	Silverado/Sierra	5.5'	62.00" x 69.00"	DZ86972
		6.5'	62.00" x 78.50"	DZ86973
		8'	62.00" x 97.25"	DZ86974
1999-2006	Silverado/Sierra	6.5'	63.75" x 78.25"	DZ86887
		8'	63.75" x 96.75"	DZ86886
2015	Colorado/Canyon	5'	55.25" x 63.87"	DZ87009
		6'	55.25" x 73.20"	DZ87010
2004-2012	Colorado/Canyon	5'	56.00" x 60.25"	DZ86938
		6'	56.00" x 71.75"	DZ86939
<i>Dodge</i>				
2002-2015	Ram 1500 (2009+)	5.5'	63.00" x 65.75"	DZ86996
		6'	63.00" x 75.00"	DZ86917
		8'	63.00" x 97.00"	DZ86916
2003-2015	Ram 2500/3500 (2009+)	5.5'	63.00" x 65.75"	DZ86996
		6'	63.00" x 75.00"	DZ86917
		8'	63.00" x 97.00"	DZ86916
<i>Ford</i>				
2015	F150	5.5'	64.40" x 66.70"	DZ87005
		6'	64.40" x 78.20"	DZ87006
		8'	64.40" x 96.60"	DZ87007
2004-2013	F150	5.5'	64.00" x 64.50"	DZ86928
		6.5'	64.00" x 78.25"	DZ86929
		8'	64.00" x 96.75"	DZ86930
1999-2015	F250/F350 Super Duty	6.5'	65.00" x 81.50"	DZ86882
		8'	65.00" x 97.75"	DZ86881
1982-2011	Ranger	6'	51.50" x 71.25"	DZ86718
<i>Nissan</i>				
2005-2013	Frontier	6'	60.00" x 72.00"	DZ86965
<i>Toyota</i>				
2007-2015 (2007 +)	Tundra	5.5'	64.50" x 65.75"	DZ86985
		6.5'	64.50" x 77.75"	DZ86986
<i>Universal Utility Mats</i>				
Universal Bed Mat 4' x 8'		8'	48" x 96"	DZ85005



TRUCK STEPS



EZStep Box Step

Year	Application	Part #
Chevrolet/GMC		
2007-2014	Chevrolet Silverado/ GMC Sierra 1500 (5.8' and 6.5' Box) (Also fits 07-10 HD Models)	290711
2007-2014	Chevrolet Silverado/GMC Sierra 1500 (8' Box) (Also fits 07-10 HD Models)	290713
2011-2014	Chevrolet Silverado/ GMC Sierra 2500HD/3500 (6.5' Box)	291112
2011-2014	Chevrolet Silverado/ GMC Sierra 2500HD/3500 (8' Box)	291113
Dodge		
2009-2014	Dodge Ram 1500 (5.6', 6.4' and 8' Box)	290931
2010-2012	Dodge Ram 2500, 3500 (6.5' and 8' Box)	291032
Ford		
2009-2014	Ford F-150 (5.5', 6.5' and 8' Box)	290921
2008-2015	Ford Super Duty (6.5' and 8' Box)	290822

Grip Step Cab Length Applications

Year	Application	Bracket	Step Board
Chevrolet/GMC			
1999-2013	Silverado/Sierra 1500 Regular Cab	401111	415054
2015	Silverado/Sierra 2500HD/3500 Regular Cab	401541	415054
2001-2014	Silverado/Sierra 2500HD/3500 Regular Cab	401111	415054
1999-2013	Silverado/Sierra 1500 Extended Cab	401113	415078
2001-2015	Silverado/Sierra 2500HD/3500 Extended/Double Cab	401113	415078
2004-2013	Silverado/Sierra 1500 Crew Cab	401113	415088
2001-2015	Silverado/Sierra 2500HD/3500 Crew Cab	401113	415088
Dodge			
2009-15	Ram Regular Cab 1500	400931	414060
2010-15	Ram Regular Cab 2500, 3500, 4500, 5500	400931	415060
2009-15	Ram Quad Cab 1500	400932	415078
2009-15	Ram Crew Cab 1500	400932	415088
2010-15	Ram Crew Cab 2500, 3500	400932	415088
2010-15	Ram Mega Cab 2500, 3500	401037	415098
Ford			
2015	F-150 Regular Cab	401521	415060
2015	F-150 Super Cab	401523	415078
2015	F-150 Super Crew	401523	415088
2004-14	F-150 Regular Cab	400921	415060
2004-14	F-150 Super Cab	400922	415078
2004-14	F-150 Super Crew	400922	415088
1999-15	F-Series Super Duty Regular Cab	409921	415054
1999-15	F-Series Super Duty Super Cab	409922	415078
1999-15	F-Series Super Duty Crew Cab	409922	415088

LIVERNE
TRUCK EQUIPMENT



StepUp Box Step

Year	Custom Mounting Bracket Application	Side	Part #
<i>Chevrolet/GMC</i>			
2007-2013	Chevrolet Silverado/GMC Sierra Extended Cab (6.5 ft. Box) **	LH	420714
	** Excludes 11-13 HD Models	RH	420715
2007-2013	Chevrolet Silverado/GMC Sierra Crew Cab (6.5 ft. Box) **	LH	420716
	** Excludes 11-13 HD Models	RH	420717
2007-2013	Chevrolet Silverado/GMC Sierra (8 ft. Box)	LH	420718
		RH	420719
1999-2007	Chevrolet Silverado/GMC Sierra 1500 Classic	LH	429916
		RH	429917
2011-2015	Chevrolet Silverado/GMC Sierra 2500HD/3500 (6.5 and 8 ft. Box)	LH	421116
		RH	421117
2011-2014	Chevrolet Silverado/GMC Sierra 2500HD/3500 Dual Wheel (8 ft. Box)	LH	421112
		RH	421113
2007-2010	Chevrolet Silverado/GMC Sierra 2500HD/3500 Dual Wheel (8 ft. Box)	LH	420712
		RH	420713
2001-2007	Chevrolet Silverado/GMC Sierra 2500HD/3500 Classic	LH	420116
		RH	420117
<i>Dodge</i>			
2009-2015	Ram 1500 (6.5 ft. Box and 8 ft. Box)	LH	420936
		RH	420936
2010-2012	Ram 2500, 3500MegaCab 3500 Dual Wheel (6.5 ft. Box and 8 ft. Box)	LH	421036
		RH	421037
2010-2012	Ram 2500, 3500 Dual Wheel (8 ft. Box)	LH	421032
		RH	421033
2002-2008	Ram 1500 (6.5 ft. Box and 8 ft. Box)	LH	420236
		RH	420237
2003-2009	Ram 2500, 3500 (6.5 ft. Box and 8 ft. Box)	LH	420236
		RH	420237
<i>Ford</i>			
2009-2014	F-150 (6.5 ft. Box and 8 ft. Box) (Does Not Fit Super Cab 8 ft. Box)	LH	420926
		RH	420927
2004-2008	F-150 (6.5 ft. Box and 8 ft. Box)	LH	420426
		RH	420427
2008-2015	Super Duty (6.5 ft. Box and 8 ft. Box) (Including Dual Wheel)	LH	420826
		RH	420826
1999-2007	Super Duty (6.5 ft. Box and 8 ft. Box)	LH	429926
		RH	429927
<i>Universal</i>			
	Universal Step Assembly		420100





Fig. 1



Fig. 2



Fig. 3



Fig. 4



Fig. 5



Fig. 6

Battery Storage

Hidden Power

Years	Fig.#	Model	Part#
1973-2007	1	Ford F250/F350 Long Bed Only (Without Battery Box)	A7703
1973-2007	-	Ford F250/F350 Long Bed Only with Battery Box	A7727
2008-2012	-	Ford F250/F350/F450 Long Bed Only with Battery Box	A7728
2001-2010	-	Chevy/GMC 2500/3500 Ext. & Crew Long Bed / Crew Short Bed	A7730
2011-2013	-	Chevy/GMC 2500/3500 Ext. & Crew Long Bed	A7732
1994-2002	-	Dodge 1500/2500/3500 Quad Cab Long Bed with Battery Box	A7742
2003-2009	-	Dodge 2500/3500 Quad Cab Long Bed	A7740
2006-2013	-	Dodge 2500/3500 Mega Cab Short & Long Bed	A7740
2009-2013	-	Dodge 2500/3500 Crew Cab Long Bed	A7740

PowerArmor Battery Storage

Part #	Fig.#	Description	Dimensions
A7706	2	DH bright tread diamond plate	26½"x7⅞"x13"
A7708	-	DH High impact powder-coat black diamond plate	26½"x7⅞"x13"
A7711	-	DH bright tread plate diamond plate	24"x7⅞"x13"
A7712	-	DH high impact powder-coat black diamond plate	24"x7⅞"x13"
A7709	-	MAX bright tread diamond plate	58½"x7⅞"x13"
A7710	-	MAX high impact powder-coat black diamond plate	58½"x7⅞"x13"

Battery Boxes can be used with 6 & 12 volt

PowerArmor Battery Storage w/ Solar Panels

Part #	Fig.#	Description	Dimensions
A7706S	3	DH bright tread diamond plate	26½"x7⅞"x13"
A7708S	-	DH High impact powder-coat black diamond plate	26½"x7⅞"x13"
A7711S	-	DH bright tread plate diamond plate	24"x7⅞"x13"
A7712S	-	DH high impact powder-coat black diamond plate	24"x7⅞"x13"
A7709S	-	MAX bright tread diamond plate	58½"x7⅞"x13"
A7710S	-	MAX high impact powder-coat black diamond plate	58½"x7⅞"x13"

Battery Boxes can be used with 6 & 12 volt

Security Products

Part#	Fig. #	Description
A7750	4	Lock and Load Security Tray
A7751	-	Spare Maximum Security Strap
A7701	5	Fortress Gas Lock ⅜", for Propane Tanks
A7702	-	Fortress Gas Lock ½", for Propane Tanks
A7770	-	Fortress Gas Lock 1½", for Propane Tanks (Airstream)
A7773	6	Fortress PowerLock – White
A7774	-	Fortress PowerLock – Black

CAMPER ACCESSORIES

Glowstep

Description	6" Tread Depth	8" Tread Depth
GlowStep - Add-a-Step	A7501	A7801
GlowStep - 2 Step	A7502	A7802
GlowStep - 3 Step	A7503	A7803
GlowStep - 4 Step	A7504	A7804
GlowStep - 5 Step	A7505	A7805
GlowStep - 6 Step	A7506	A7806

GlowStep Capacities

	6" Tread Depth	8" Tread Depth
2 - 4 Steps	325 lbs.	350 lbs.
5 - 6 Steps	275 lbs.	300 lbs.

GlowStep Accessories

Part #	Fig.#	Description
A7602	1	SafeStep Panels
A7603	2	Dirt Destroyer
A7604	-	Universal Mounting Bracket
A7509	3	GlowStep Series Lock
A7510	4	Basement Camper Step - Powder Coat White
A7512	-	Basement Camper Step - Aircraft Grade Aluminum

GlowGuide

Part#	Fig. #	Description
A7600	5	GlowGuide Handrail
A7610	-	RV GlowGuide
A7601	-	GlowGuide Brush

GlowStep Capacities when used with a GlowGuide

Description	6" Tread Depth	8" Tread Depth
2 - 4 Steps	350 lbs.	375 lbs.
5 - 6 Steps	300 lbs.	325 lbs.

Truck Camper Storage/Stability

Part#	Fig. #	Description
A7012	6	Camper Packer - Lumber Included
A7010	-	Camper Packer - Lumber Not Included
A7006	7	Round Bracket FastGun Wobble Stopper
A7005	-	Round Bracket Wobble Stopper
A7016	-	Square Bracket FastGun Wobble Stopper
A7015	-	Square Bracket Wobble Stopper



Fig. 1



Fig. 2



Fig. 3



Fig. 4



Fig. 5



Fig. 6



Fig. 7

ATWOOD AIR CONDITIONERS

ATWOOD AIR CONDITIONERS

Atwood Air Command Air Conditioners were designed, tested, and proven in the Australian "Outback" to withstand rigors of the harshest elements. Models feature either 16K BTU or 18K BTU equivalent performance, Super V-Flow air distribution, digital thermostat, remote control (18K), and an independent dual motor design... even heat pumps come standard in 18K models! Air Command's durability, function, and features are unlike anything else on the market today.

Rooftop Unit Dimensions (W) 26.5" x (H) 13.6" x (L) 39"
Roof Cutout 14" x 14"



Fig. 1



Fig. 2

Part #	Fig #	Description
15001	1	16K BTU, Non-Ducted, 330 CFM
15011	2	16K BTU, Ducted w/ Remote, 330 CFM
15002	1	18K BTU, Non-Ducted, 330 CFM
15012	2	18K BTU, Ducted w/ Remote, 330 CFM

Fan-Tastic Vent

Part #	Fig.#	Features
807350	3	14- Speed Manual/Auto Variable Fan, Reversible Air Flow Switch, Built-in Thermostat, Automatic Opening Dome, Rain Sensor, Hand-Held Remote
803350	-	3 - Speed Manual/Auto Variable Fan, Reversible Air Flow Switch, Built-in Thermostat, Automatic Opening Dome, Rain Sensor
802250	-	3 - Speed Manual/Auto Variable Fan, Reversible Air Flow Switch, Built-in Thermostat
801250	-	3 - Speed Manual/Auto Variable Fan, Reversible Air Flow Switch
80004WH 807359	-	3 - Speed Manual/Auto Variable Fan Take any Fan-Tastic Vent or Create-A-Vent and upgrade it to be a Model 6600R without disturbing the factory waterproof seal.
K2035-81	4	Pop 'N Lock Screen Kit - White
U1500WH	5	Ultra Breeze Vent Cover - White



Fig. 3



Fig. 4



Fig. 5



5/8" Receiver Lock

Model	Fig.#	Part #
Chrysler	1	7018448
Ford	1	7018447
Ford - Side Cut	1	7023585
GM - Center Cut	1	7023582
GM Early Model	1	7018445
GM Late Model	1	7018446
Nissan	1	7023583
Toyota	1	7023584

1/2" Receiver Lock

Model	Fig.#	Part #
Chrysler	1	7019334
Ford	1	7019343
Ford - Side Cut	1	7023630
GM - Center Cut	1	7023627
GM Early Model	1	7019341
GM Late Model	1	7019342
Nissan	1	7023628
Toyota	1	7023629



Fig. 1

Coupler Pin Lock

Model	Fig.#	Part #
Chrysler	2	7025286
Ford	2	7025285
Ford - Side Cut	2	7025290
GM - Center Cut	2	7025287
GM Early Model	2	7025283
GM Late Model	2	7025284
Nissan	2	7025288
Toyota	2	7025289

Padlocks

Model	Fig.#	Part #
Chrysler	3	7018520
Ford	3	7018519
Ford - Side Cut	3	7023540
GM - Center Cut	3	7023537
GM Early Model	3	7018517
GM Late Model	3	7018518
Nissan	3	7023538
Toyota	3	7023539



Fig. 2



Fig. 3

6' Cable Lock

Model	Fig.#	Part #
Chrysler	4	7018452
Ford	4	7018451
Ford - Side Cut	4	7023722
GM - Center Cut	4	7023719
GM Early Model	4	7018449
GM Late Model	4	7018450
Nissan	4	7023720
Toyota	4	7023721

Tool Box Latch

Model	Fig.#	Part #
Chrysler	5	7022699
Ford	5	7022698
Ford - Side Cut	5	7023550
GM - Center Cut	5	7023547
GM Early Model	5	7022696
GM Late Model	5	7022697
Nissan	5	7023548
Toyota	5	7023549



Fig. 4



Fig. 5

MISC. TRUCK ACCESSORIES



Fig. 1



Fig. 2



Fig. 3



Fig. 4



Fig. 5



Fig. 6



Fig. 7



Fig. 8

OVERSIZE LOAD

Fig. 9

Back-Up Alarms

Part #	Fig. #	Description
505	1	87 Decibel, 12-24 VDC, self-grounding back-up alarm
510	1	97 Decibel, 12 VDC, self-grounding back-up alarm
520	1	97 Decibel, 12-24 VDC, self-grounding back-up alarm
530	1	102 Decibel, 12-24 VDC, self-grounding back-up alarm
EA5050	2	87db Multi-Frequency Back-Up Alarm
EA5200	2	97db Multi-Frequency Back-Up Alarm

Back-Up Camera Systems

Part #	Fig. #	Description
EC5605-WK 3		5.6" LCD Wireless Camera System
K7000B	4	7.0" LCD Color Camera System

Safety Triangles

Part #	Fig. #	Description
1005	5	Triangle Flare Kit

Safety Flags

Part #	Fig. #	Description
FW200C	6	18" x 18" Red Cloth Flag with Wire
FW300C	6	18" x 18" Red Jersey Flag with Wire
FW400C	6	12" x 12" Orange Mesh Flag with Wire
MF101	7	Flag Magnet
FS200C	8	18" x 18" Red Cloth Flag with Handle
FS300C	8	18" x 18" Red Mesh Flag with Handle
FS400B	8	16" x 16" Orange Mesh Flag with Handle
AV104	9	18" x 84" "Oversize Load" Banner
CV110AK	9	12" x 48" "Oversize Load" Banner - Reflective
AWS204	9	18" x 84" "Oversize Load" Wood Sign

ECCO®



Landscape Trailer Racks

Part #	Fig. #	Description
LT10	1	Lockable Trimmer Rack (padlocks not incl.)
LT12	2	Trimmer Rack for Enclosed Trailers
LT13	3	Lockable Trimmer Rack, Locks Incl.
LT15	4	Multi Rack, fits Hedge Trimmers or Chain Saws
LT20	5	Backpack Blowers, most brands but not Stihl
LT22	5	Backpack Blowers, Stihl BR340 & BR420
LT25	6	Water Cooler Rack, adj. strap included
LT30	7	Gas Can Rack, fits 1 5-gal. or 2 2-1/2-gal. cans
LT32	7	Gas Can Rack, fits 1 5-gal. gas can
LT35	8	Hand Tool Rack, holds 6 straight handle tools
LT37	9	Hand Tool Rack, holds 6 straight handle tools
LT40	10	Trimmer Line Spool Bracket



Fig. 1



Fig. 2



Fig. 3



Fig. 4



Fig. 5



Fig. 6



Fig. 7



Fig. 8



Fig. 9



Fig. 10



Fig. 11

Ramp Plate Kits

Part#	Fig. #	Description
RP8	-	Works with 2" x 8" Planks
RP12	-	Works with 2" x 12" Planks

